

**Focus BST and GMT daylight saving settings
for HRX3000 and HRX5000 proximity card terminals
2011**

The HRX master terminal will normally update its BST and GMT settings automatically as each new daylight saving date is reached. However there are some circumstances when the settings may be incorrect – following a firmware upgrade for example.

We recommend that the settings are checked and adjusted, during the run up to each daylight saving date. Information about these dates can be found at:
<http://www.greenwichmeantime.com/>


It is very easy to check the settings and make adjustments if necessary.

This guide will step through the procedure.

If you have any questions relating to daylight saving, then please feel free to contact us as info@egress-sys.co.uk


Step 1:

From within Focus, click on *System* and then *Clock Utilities* from the menu bar.

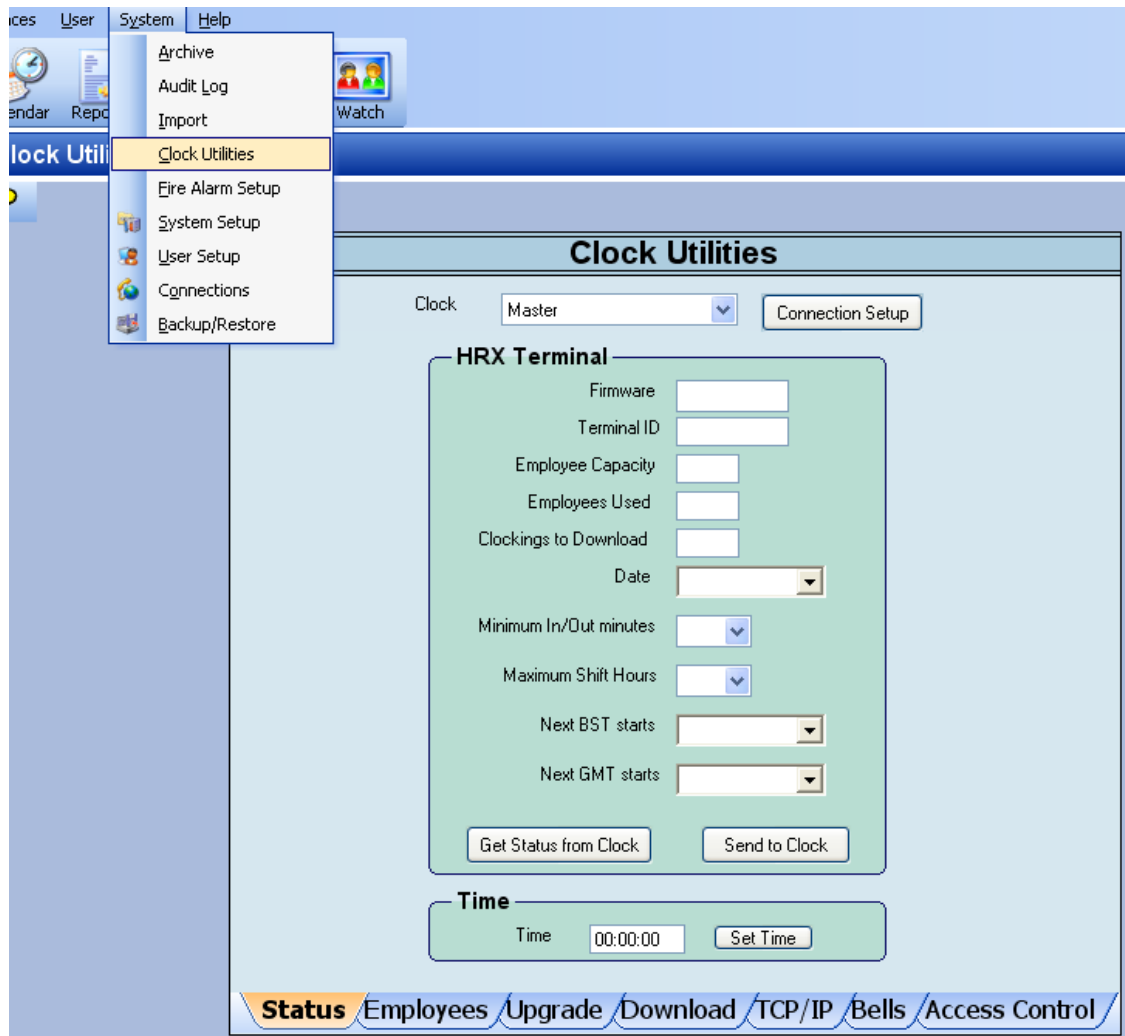


Step 2:

 If it is not already visible, select the name of the required terminal from the drop down list labelled *Clock*:



Step 3:

Click on the *Get Status from Clock* button. This should then populate the remaining fields:

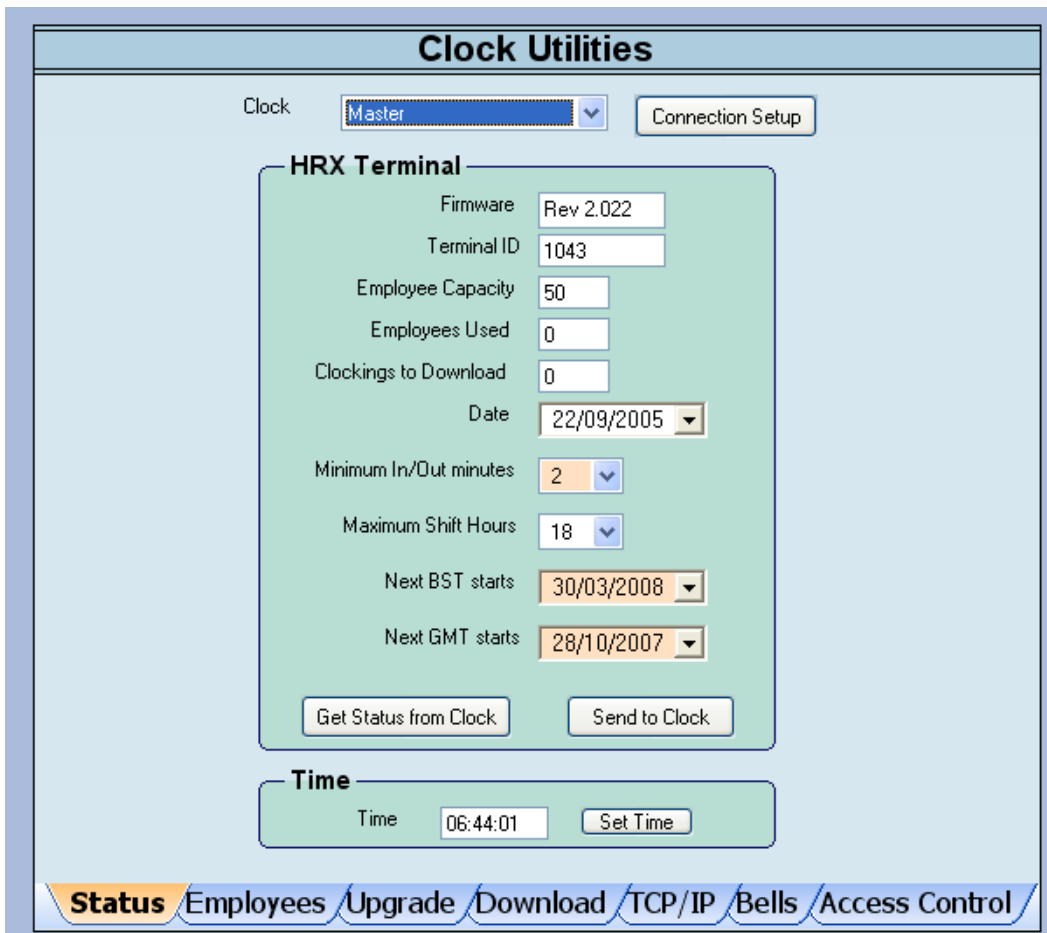

Clock Utilities

Clock: **Master**

HRX Terminal

Firmware:

Terminal ID:

Employee Capacity:

Employees Used:

Clockings to Download:

Date:

Minimum In/Out minutes:

Maximum Shift Hours:

Next BST starts:

Next GMT starts:

Time

Time:

Status / Employees / Upgrade / Download / TCP/IP / Bells / Access Control

Step 4:

Ensure the value for *Next BST Starts* is correct. e.g. 27/03/2011.*

Ensure the value for *Next GBT Starts* is correct. e.g. 30/10/2011.*

If both dates are correct, then no further action is required.

*Information about these dates can be found at:

<http://www.greenwichmeantime.com/>

If either of these values are wrong, then enter the correct date (clicking on the arrow at the end of each field, opens up a calendar that may be used to select the required date). Once both dates have been corrected, click on *Send to Clock* button.

22/03/11