

Daylight Saving for GMT 25/10/2015

Twice a year, we send out reminders to our customers regarding the Timelink Daylight Saving settings for March and October.

This year (2015), British Summer Time (BST) begins on 29th March, and ends on 25th October (reverting back to Greenwich Mean Time (GMT)).

In order for the Timelink clocks to automatically adjust their time, it is necessary to configure them **IN ADVANCE** with the forthcoming BST and GMT dates.

Please refer to the following instructions for configuring the Timelinks.

Should you require any assistance, please contact us:

tel: 0115 9314007, email: carl@egress-sys.co.uk, paul@egress-sys.co.uk or mark@egress-sys.co.uk

Section 1 - Setting the GMT Date

- Using the special function card/badge marked **INSTALLATION**, insert and remove the card/badge at the Timelink. If you have more than one Timelink, then the Installation card/badge should be used at the **Primary** Timelink. If you are unsure which Timelink is the Primary, either contact Egress Systems support 0115 9314007 for assistance, or follow the procedure in section 2.
- The display on the Timelink Clock should now show the word: **INSTALLATION** on the top line.

***Note**, so long as a flashing cursor is not visible on the display, then the **0** (zero) key acts as an escape key. Pressing **0** (zero) repeatedly will eventually take you out of the menu and back to the normal date and time display.

- Press the number **3** on the keypad. The display should now show **SET TIME** on the top line.
- Press the number **6** on the keypad. The display should now show **1.BST** on the top line.
- Press the number **2** on the keypad. The display should now show **2.GMT** on the top line.
- Press **ENTER** on the keypad. The display should now show a flashing cursor on the bottom line. Type in **2510** on the Keypad and press **ENTER**
- Press the **0** (zero) key on the keypad 3 times or until the normal date and time is displayed.

Section 2 - Determining the Primary Timelink, SITES WITH MULTIPLE TIMELINKS ONLY

Repeat the following procedure until the Primary Timelink is found:

- Insert and remove the Installation card/badge at a Timelink and press the following keys on the keypad: **8 1 5**
- The words **PRIMARY CLOCK** should be displayed on the top line.
- The bottom line will display **ON** or **OFF** depending upon whether that particular Timelink is set to be the Primary.
- Press **0** (zero) 3 times to revert back to the normal date and time display.

If none of the Timelinks are set to be the Primary, select one Timelink and insert the Installation card/badge. Press the following keys on the keypad: **8 1 5 ENTER 1 ENTER**. The display should now show **PRIMARY CLOCK ON**. Press **0** (zero) 3 times to revert back to the normal date and time display.

Now go back to section 1 to set the BST / GMT date.